

## Assembly instructions for drive shaft support

Einbauhinweis für Lagerung, Gelenkwelle

Instructions de montage pour suspension, arbre de cardan

Instrucciones de montaje para soporte de transmisión

Инструкция по установке подвесной опоры  
карданного вала

Istruzioni di montaggio del supporto albero motore



**MEYLE no. 100 152 2001 | 100 151 0000/S**

To fit/Passend für/Aptos para/Convient pour/для/Adatti per  
**PORSCHE Cayenne | VW Touareg**



**Installation by qualified personnel only.  
Car manufacturer's instructions to be  
observed closely.**





Einbau nur durch geschulte Fachkräfte. Hinweise der Fahrzeughersteller genau befolgen.






El montaje sólo debe realizarse por un técnico instruido. Siga exactamente las indicaciones del fabricante del vehículo.

Installation uniquement par main-d'oeuvre spécialisée. Suivre les indications du fabricant d'automobile pour l'installation.

Монтаж должны производить только обученные специалисты. Следует точно соблюдать инструкции завода-изготовителя автомобиля.


Montaggio solo da parte di meccanici specializzati. Sono da seguire esattamente le istruzioni fornite dal costruttore del veicolo.

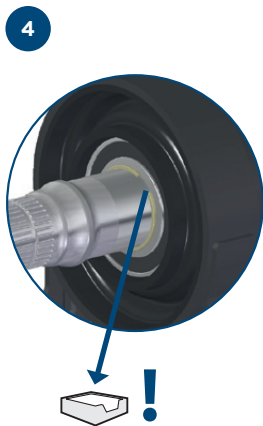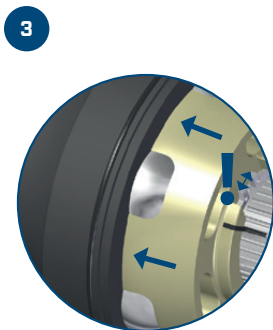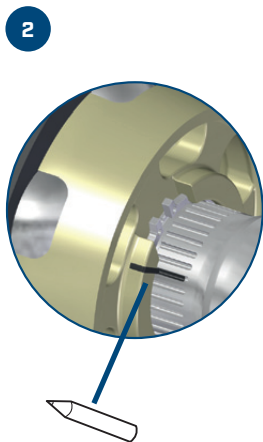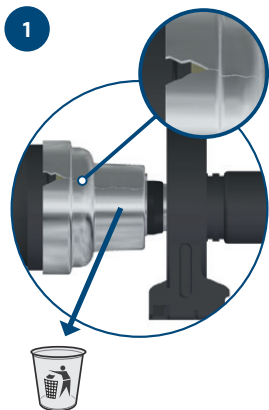

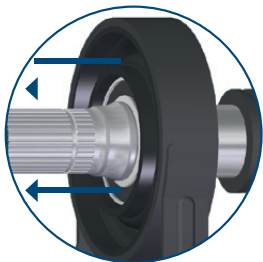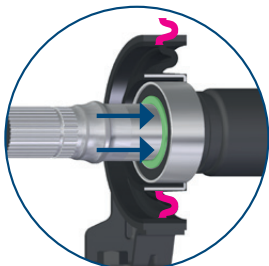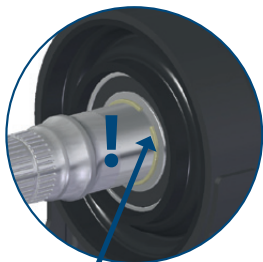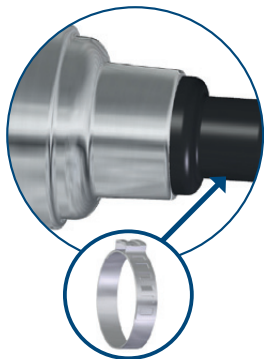**5****6****MEYLE****7****MEYLE****8****MEYLE**


9

MEYLE

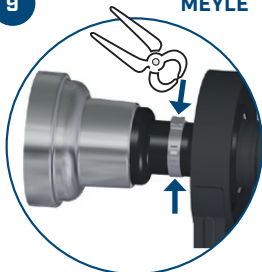


10

MEYLE

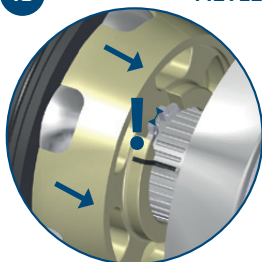


11

MEYLE

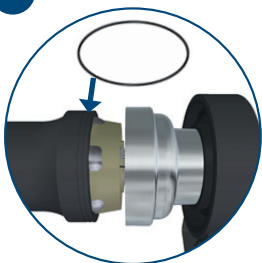


12

MEYLE

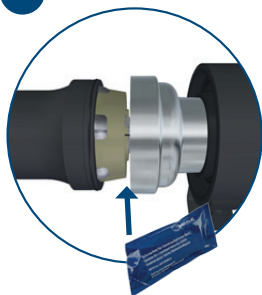

13

MEYLE

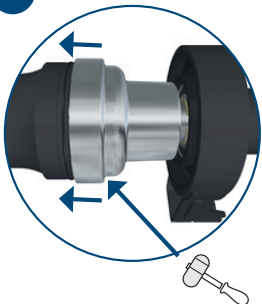

14

MEYLE

